
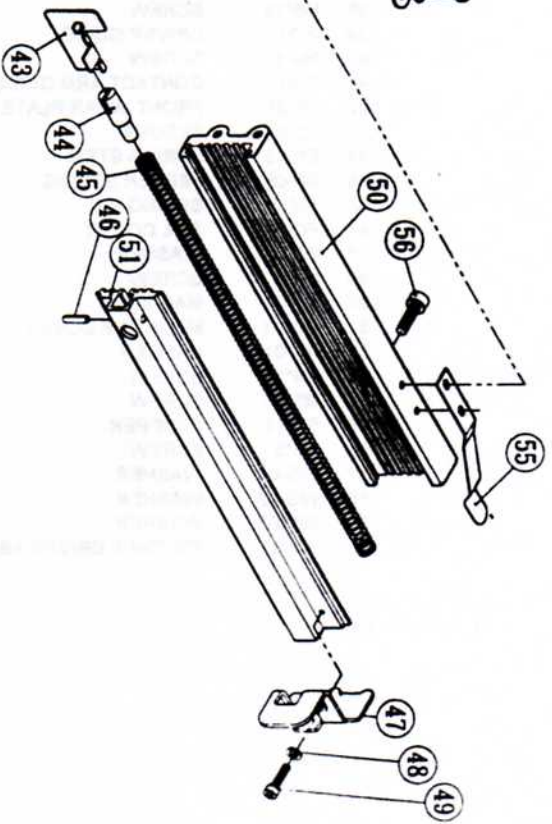
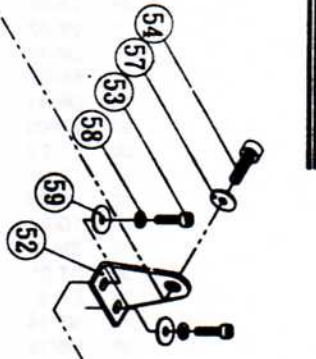


# SUPCO F-32

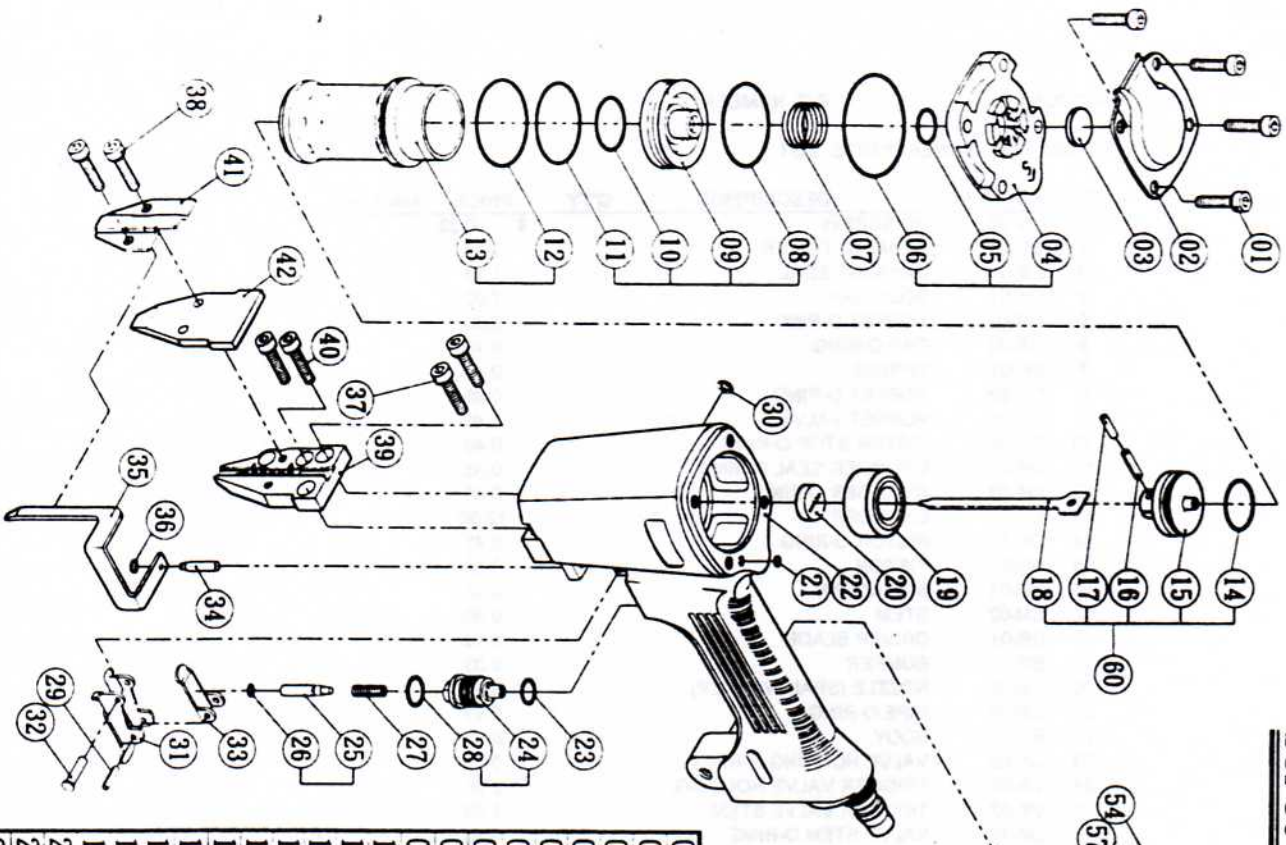

01	M5x20 HD. SCREW	23	OR-09 VALVE HOUSING O-RING	45	SP-05 FEEDER SPRING
02	EC-01 EXHAUST COVER	24	VS-01 TRIGGER VALVE HOUSING	46	SM-07 SPRING PIN
03	ES-01 EXHAUST SEAL	25	VS-02 TRIGGER VALVE STEM	47	FC-07 TAIL COVER
04	CA-01 BODY CAP	26	OR-10 VALVE STEM O-RING	48	WS-02 WASHER
05	OR-01 POPPET O-RING	27	SP-02 SPRING	49	M4x8 HD. SCREW
06	OR-02 O-RING	28	OR-11 O-RING	50	M2-01 MAGAZINE
07	SP-01 SPRING	29	SM-03 SPRING PIN	51	MC-01 MAGAZINE COVER
08	OR-03 POPPET O-RING	30	E-2.5 E. WASHER	52	HR-01 HANGER
09	PV-01 POPPET VALVE	31	TG-01 TRIGGER	53	M4x10 HD. SCREW
10	OR-04 PISTON STOP O-RING	32	SM-04 TRIGGER PIN	54	M5x16 HD. SCREW
11	OR-05 CYLINDER SEAL O-RING	33	TG-02 SECONDARY TRIGGER	55	SP-11 STOPPER
12	OR-06 CYLINDER O-RING	34	SM-05 CONTACT PIN	56	M5x8 HD. SCREW
13	CY-01 CYLINDER	35	ST-01 CONTACT ARM	57	WS-01 WASHER
14	OR-07 PISTON O-RING	36	E-2.5 E. WASHER	58	WS-02 WASHER
15	PS-01 PISTON	37	M5x16 HD. SCREW	59	WS-07 WASHER
16	SM-01 SPRING PIN	38	M5x12 HD. SCREW	60	PS-26 PISTON & DRIVER ASSEMBLY
17	SM-02 STEM	39	P-01 DRIVER GUIDE	61	
18	DB-01 DRIVE BLADE	40	M4x12 HD. SCREW	62	
19	BP-01 BUMPER	41	G-01 CONTACT ARM GUIDE	63	
20	SW-01 SEAL WASHER	42	FP-01 FRONT WEAR PLATE	64	
21	OR-08 PIPE O-RING	43	FD-01 FEEDER	65	
22	BD-01 BODY	44	ES-03 SPRING STEM	66	