


SUPCO S-1650

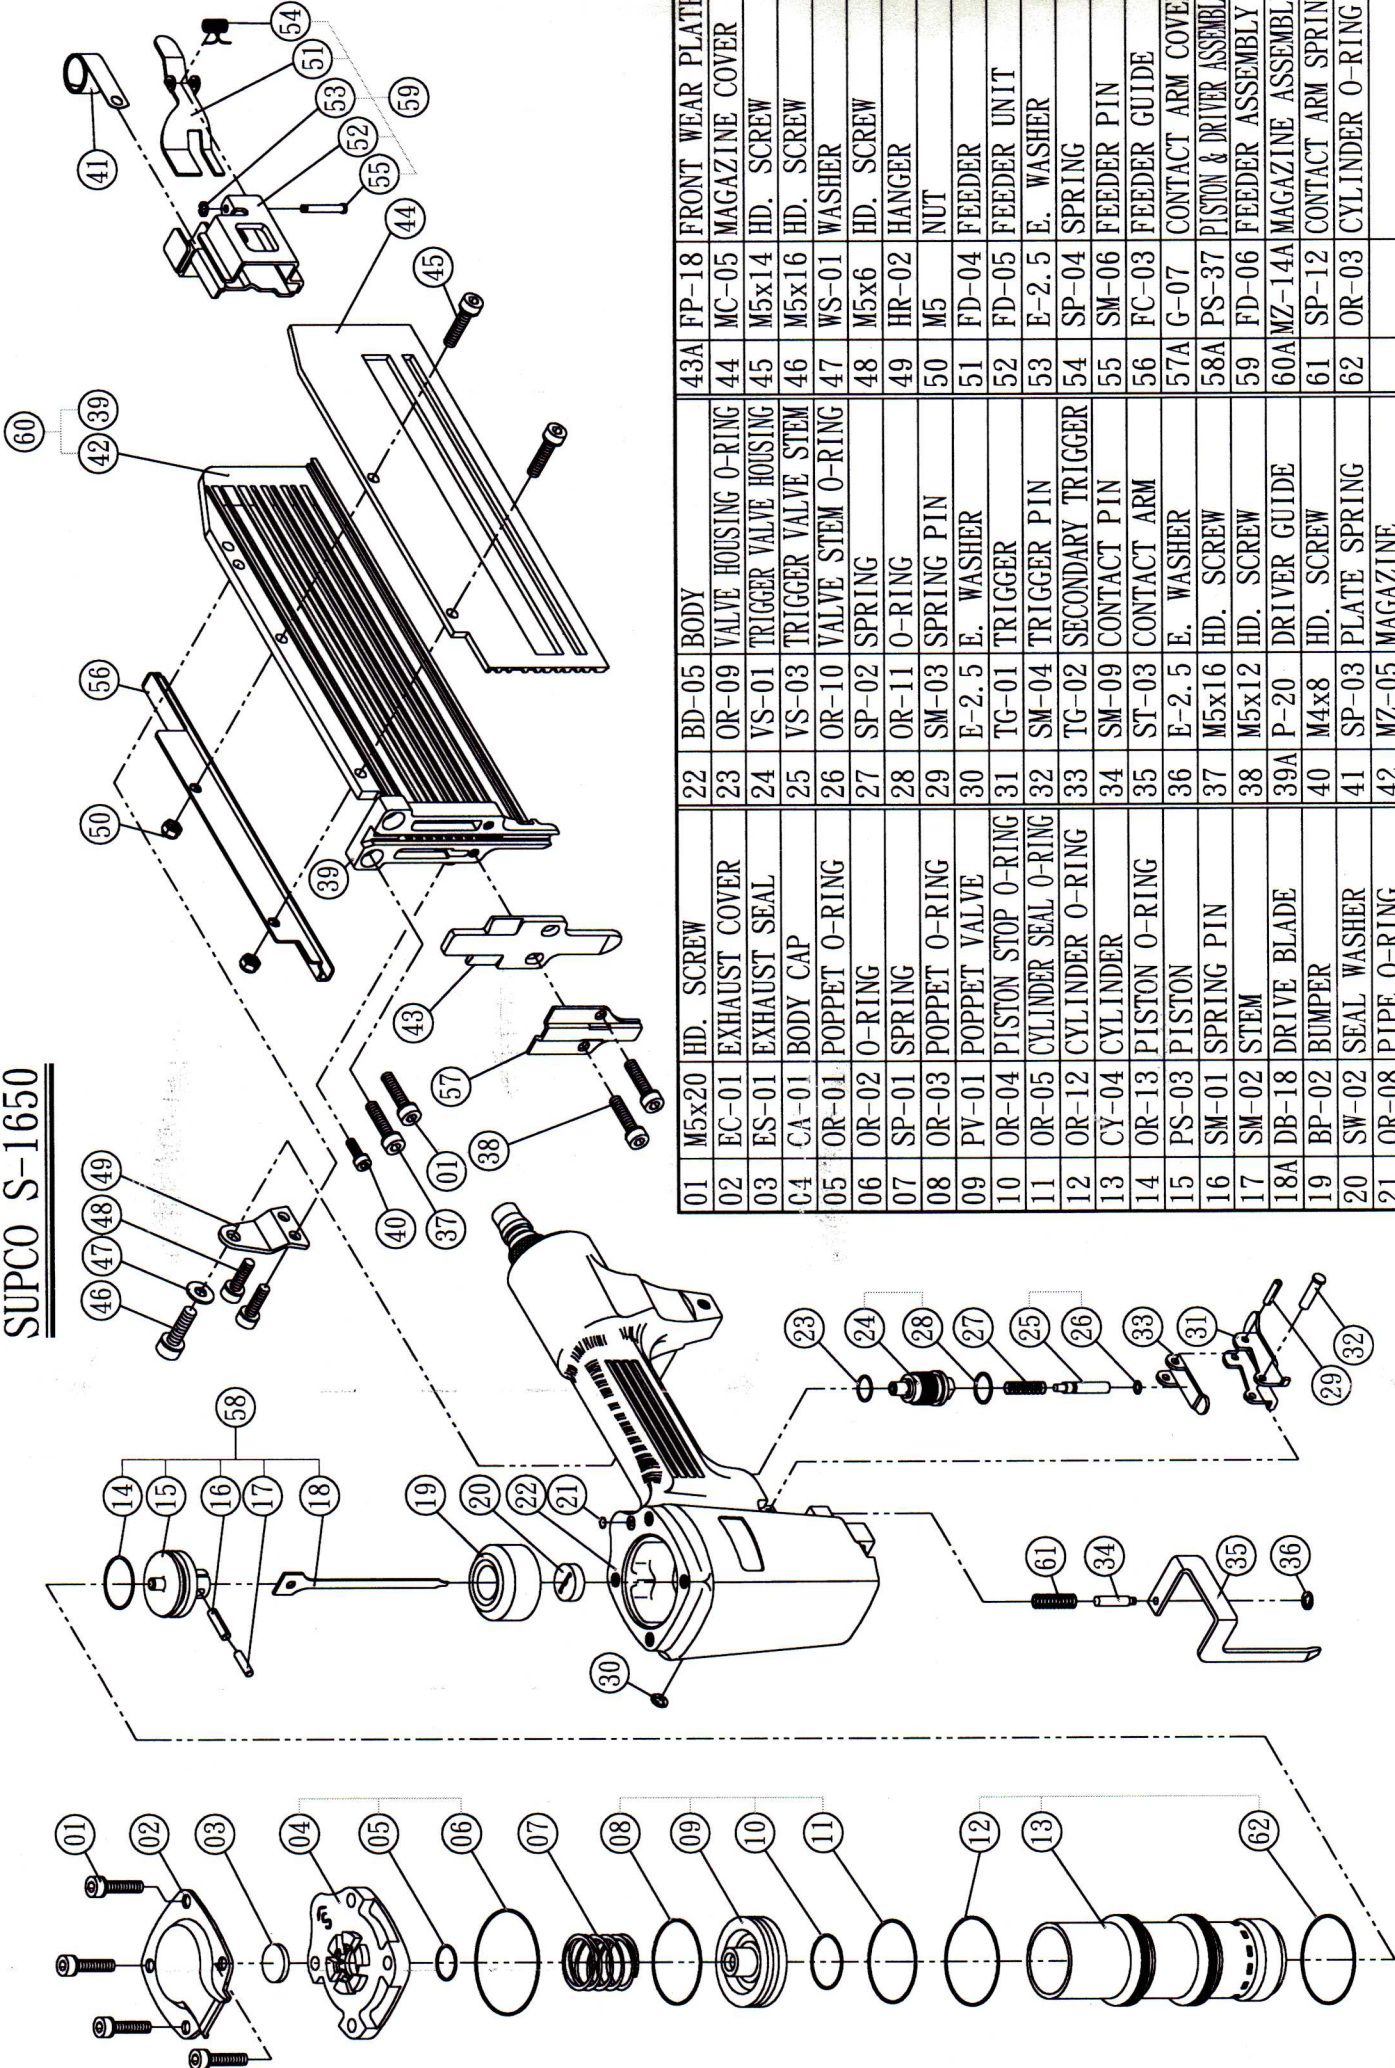

Part Number	Description	Part Number	Description	Part Number	Description
01	M5x20 HD. SCREW	22	BD-05 BODY	43A	FP-18 FRONT WEAR PLATE
02	EC-01 EXHAUST COVER	23	OR-09 VALVE HOUSING O-RING	44	MC-05 MAGAZINE COVER
03	ES-01 EXHAUST SEAL	24	VS-01 TRIGGER VALVE HOUSING	45	M5x14 HD. SCREW
04	CA-01 BODY CAP	25	VS-03 TRIGGER VALVE STEM	46	M5x16 HD. SCREW
05	OR-01 POPPET O-RING	26	OR-10 VALVE STEM O-RING	47	WS-01 WASHER
06	OR-02 O-RING	27	SP-02 SPRING	48	M5x6 HD. SCREW
07	SP-01 SPRING	28	OR-11 O-RING	49	HR-02 HANGER
08	OR-03 POPPET O-RING	29	SM-03 SPRING PIN	50	M5 NUT
09	PV-01 POPPET VALVE	30	E-2.5 E. WASHER	51	FD-04 FEEDER
10	OR-04 PISTON STOP O-RING	31	TG-01 TRIGGER	52	FD-05 FEEDER UNIT
11	OR-05 CYLINDER SEAL O-RING	32	SM-04 TRIGGER PIN	53	E-2.5 E. WASHER
12	OR-12 CYLINDER O-RING	33	TG-02 SECONDARY TRIGGER	54	SP-04 SPRING
13	CY-04 CYLINDER	34	SM-09 CONTACT PIN	55	SM-06 FEEDER PIN
14	OR-13 PISTON O-RING	35	ST-03 CONTACT ARM	56	FC-03 FEEDER GUIDE
15	PS-03 PISTON	36	E-2.5 E. WASHER	57A	G-07 CONTACT ARM COVER
16	SM-01 SPRING PIN	37	M5x16 HD. SCREW	58A	PS-37 PISTON & DRIVER ASSEMBLY
17	SM-02 STEM	38	M5x12 HD. SCREW	59	FD-06 FEEDER ASSEMBLY
18A	DB-18 DRIVE BLADE	39A	P-20 DRIVER GUIDE	60A	MZ-14A MAGAZINE ASSEMBLY
19	BP-02 BUMPER	40	M4x8 HD. SCREW	61	SP-12 CONTACT ARM SPRING
20	SW-02 SEAL WASHER	41	SP-03 PLATE SPRING	62	OR-03 CYLINDER O-RING
21	OR-08 PIPE O-RING	42	MZ-05 MAGAZINE		