


SUPCO S-1650X

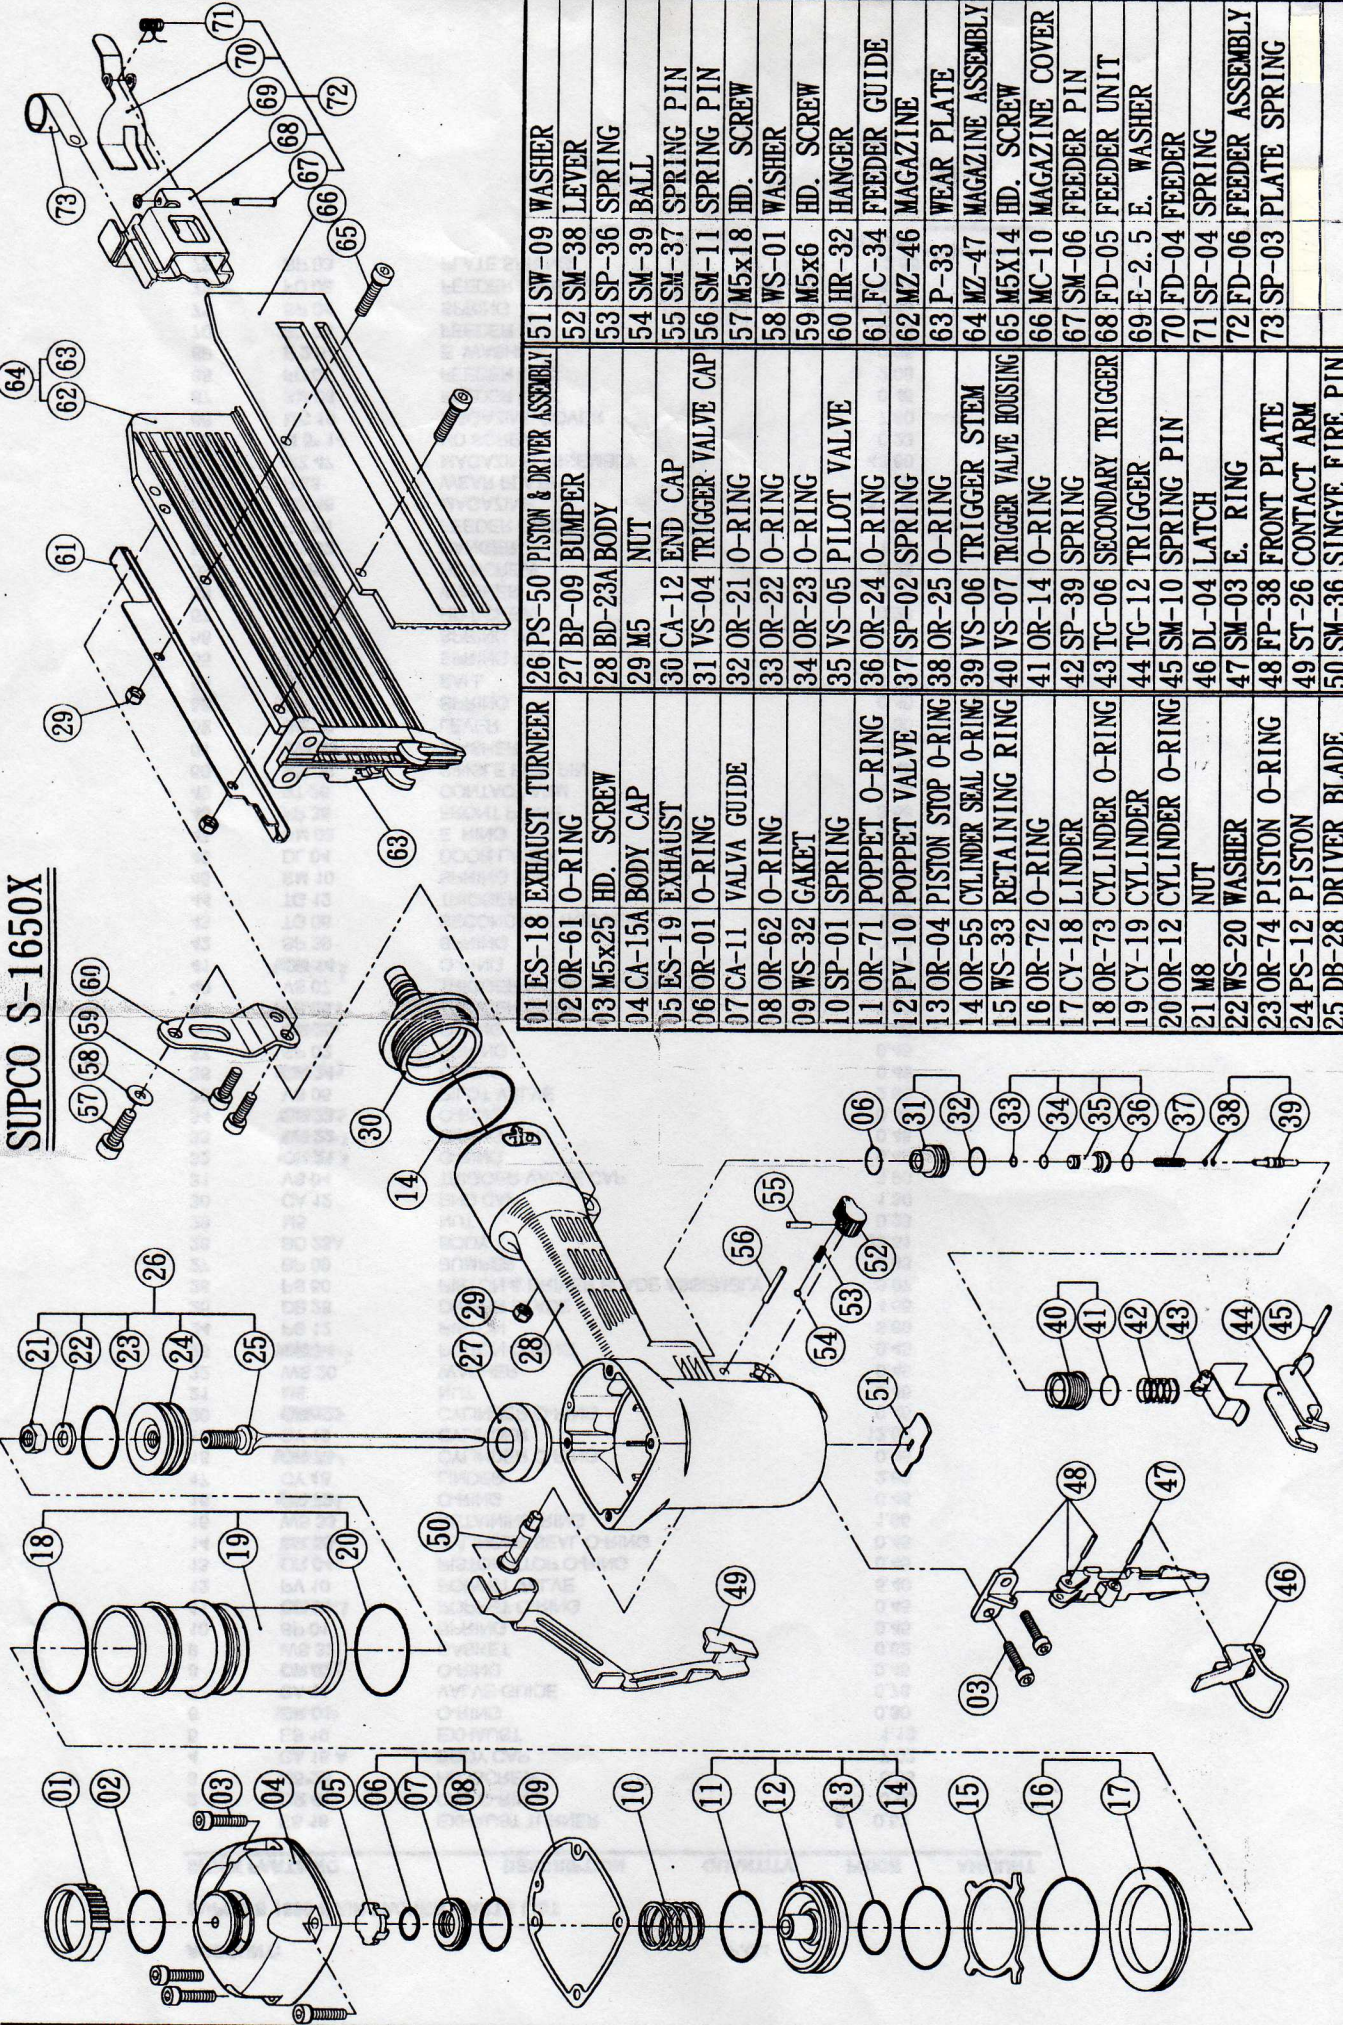

01 ES-18 EXHAUST TURNER	26 PS-50 PISTON & DRIVER ASSEMBLY	51 SW-09 WASHER
02 OR-61 O-RING	27 BP-09 BUMPER	52 SM-38 LEVER
03 M5x25 HD. SCREW	28 BD-23A BODY	53 SP-36 SPRING
04 CA-15A BODY CAP	29 M5 NUT	54 SM-39 BALL
05 ES-19 EXHAUST	30 CA-12 END CAP	55 SM-37 SPRING PIN
06 OR-01 O-RING	31 VS-04 TRIGGER VALVE CAP	56 SM-11 SPRING PIN
07 CA-11 VALVA GUIDE	32 OR-21 O-RING	57 M5x18 HD. SCREW
08 OR-62 O-RING	33 OR-22 O-RING	58 WS-01 WASHER
09 WS-32 GAKET	34 OR-23 O-RING	59 M5x6 HD. SCREW
10 SP-01 SPRING	35 VS-05 PILOT VALVE	60 HR-32 HANGER
11 OR-71 POPPET O-RING	36 OR-24 O-RING	61 FC-34 FEEDER GUIDE
12 PV-10 POPPET VALVE	37 SP-02 SPRING	62 MZ-46 MAGAZINE
13 OR-04 PISTON STOP O-RING	38 OR-25 O-RING	63 P-33 WEAR PLATE
14 OR-55 CYLINDER SEAL O-RING	39 VS-06 TRIGGER STEM	64 MZ-47 MAGAZINE ASSEMBLY
15 WS-33 RETAINING RING	40 VS-07 TRIGGER VALVE HOUSING	65 M5X14 HD. SCREW
16 OR-72 O-RING	41 OR-14 O-RING	66 MC-10 MAGAZINE COVER
17 CY-18 LINDER	42 SP-39 SPRING	67 SM-06 FEEDER PIN
18 OR-73 CYLINDER O-RING	43 TC-06 SECONDARY TRIGGER	68 FD-05 FEEDER UNIT
19 CY-19 CYLINDER	44 TC-12 TRIGGER	69 E-2.5 E. WASHER
20 OR-12 CYLINDER O-RING	45 SM-10 SPRING PIN	70 FD-04 FEEDER
21 M8 NUT	46 DL-04 LATCH	71 SP-04 SPRING
22 WS-20 WASHER	47 SM-03 E. RING	72 FD-06 FEEDER ASSEMBLY
23 OR-74 PISTON O-RING	48 FP-38 FRONT PLATE	73 SP-03 PLATE SPRING
24 PS-12 PISTON	49 ST-26 CONTACT ARM	
25 DB-28 DRIVER BLADE	50 SM-36 SINGYE FIRE PIN	