


SUPCO S-1840E

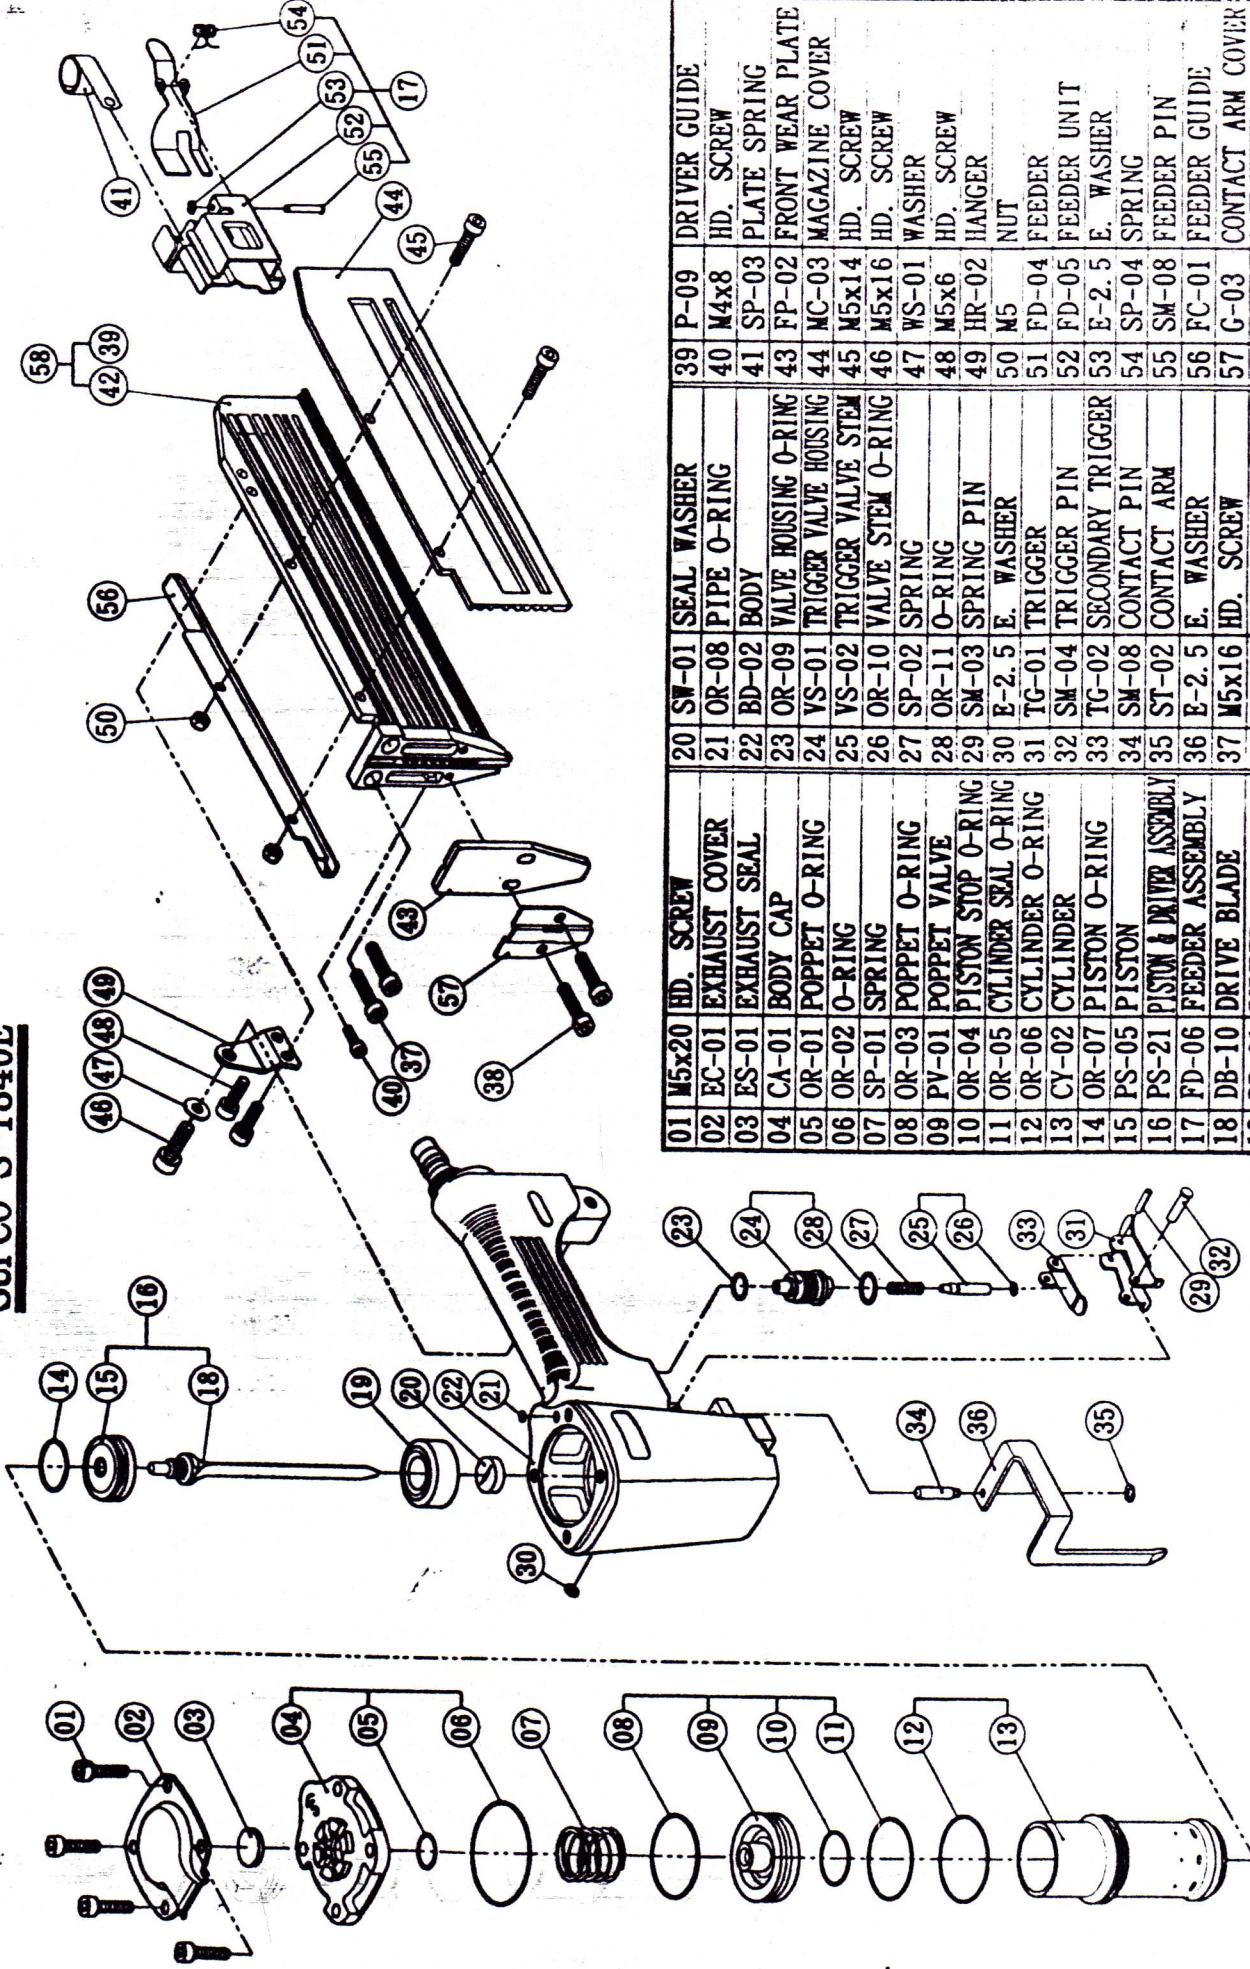

01	M5x20	HD. SCREW	20	SW-01	SEAL WASHER	39	P-09	DRIVER GUIDE
02	EC-01	EXHAUST COVER	21	OR-08	PIPE O-RING	40	M4x8	HD. SCREW
03	ES-01	EXHAUST SEAL	22	BD-02	BODY	41	SP-03	PLATE SPRING
04	CA-01	BODY CAP	23	OR-09	VALVE HOUSING O-RING	43	FP-02	FRONT WEAR PLATE
05	OR-01	POPPET O-RING	24	VS-01	TRIGGER VALVE HOUSING	44	MC-03	MAGAZINE COVER
06	OR-02	O-RING	25	VS-02	TRIGGER VALVE STEM	45	M5x14	HD. SCREW
07	SP-01	SPRING	26	OR-10	VALVE STEM O-RING	46	M5x16	HD. SCREW
08	OR-03	POPPET O-RING	27	SP-02	SPRING	47	WS-01	WASHER
09	PV-01	POPPET VALVE	28	OR-11	O-RING	48	M5x6	HD. SCREW
10	OR-04	PISTON STOP O-RING	29	SM-03	SPRING PIN	49	HR-02	HANGER
11	OR-05	CYLINDER SEAL O-RING	30	E-2.5	E. WASHER	50	M5	NUT
12	OR-06	CYLINDER O-RING	31	TG-01	TRIGGER	51	FD-04	FEEDER
13	CY-02	CYLINDER	32	SM-04	TRIGGER PIN	52	FD-05	FEEDER UNIT
14	OR-07	PISTON O-RING	33	TG-02	SECONDARY TRIGGER	53	E-2.5	E. WASHER
15	PS-05	PISTON	34	SM-08	CONTACT PIN	54	SP-04	SPRING
16	PS-21	PISTON & DRIVER ASSEMBLY	35	ST-02	CONTACT ARM	55	SM-08	FEEDER PIN
17	FD-06	FEEDER ASSEMBLY	36	E-2.5	E. WASHER	56	FC-01	FEEDER GUIDE
18	DB-10	DRIVE BLADE	37	M5x16	HD. SCREW	57	G-03	CONTACT ARM COVER
19	BP-01	BUMPER	38	M5x12	HD. SCREW	58	MZ-13	MAGAZINE ASSEMBLY