


# SUPCO S-K9032

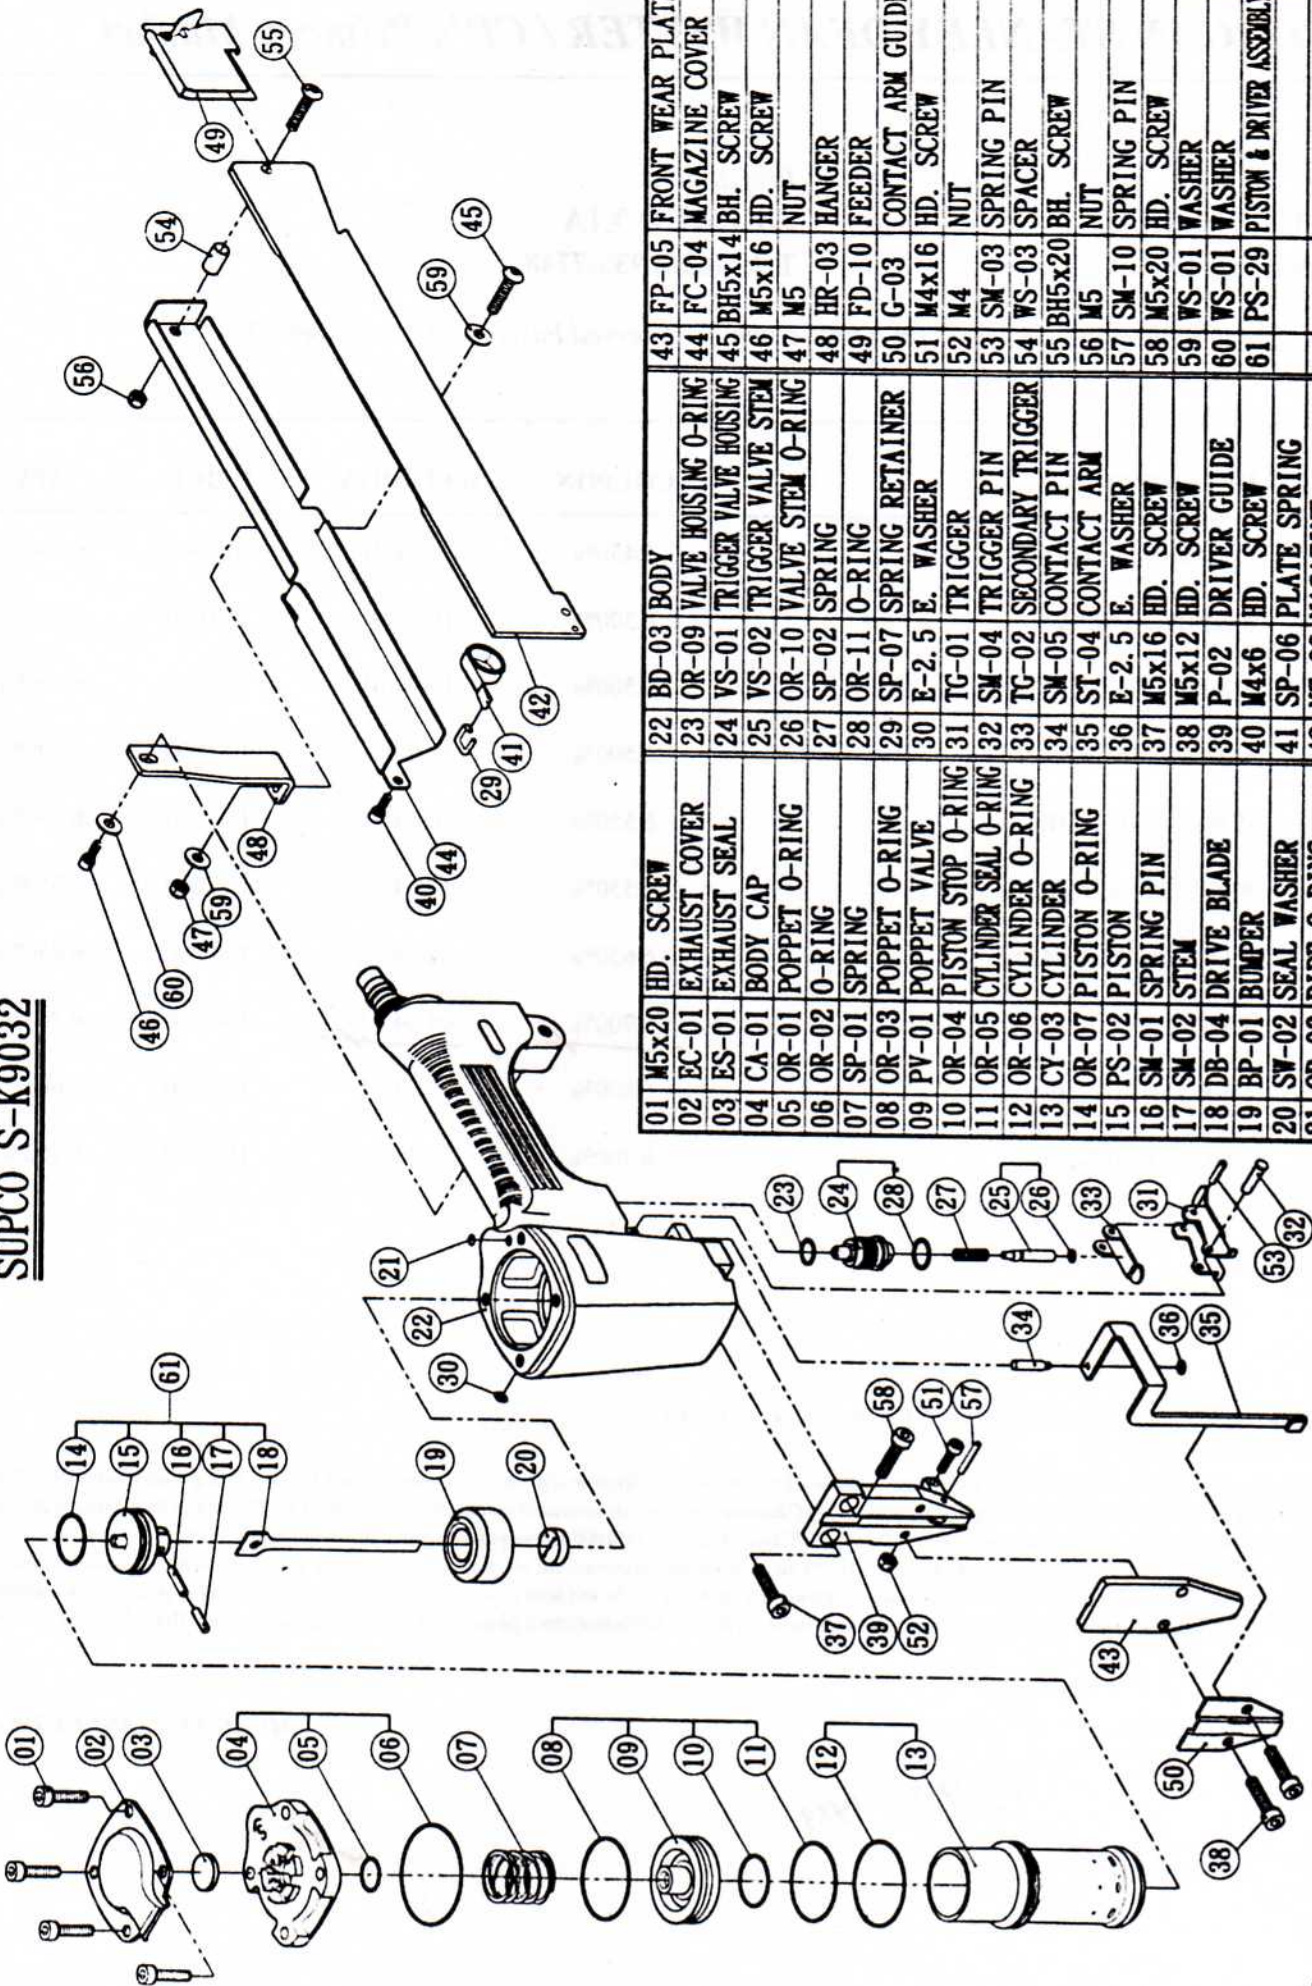

01	M5x20 HD. SCREW	22	BD-03 BODY	43	FP-05 FRONT WEAR PLATE
02	EC-01 EXHAUST COVER	23	OR-09 VALVE HOUSING O-RING	44	FC-04 MAGAZINE COVER
03	ES-01 EXHAUST SEAL	24	VS-01 TRIGGER VALVE HOUSING	45	BH5x14 BH. SCREW
04	CA-01 BODY CAP	25	VS-02 TRIGGER VALVE STEM	46	M5x16 HD. SCREW
05	OR-01 POPPET O-RING	26	OR-10 VALVE STEM O-RING	47	M5 NUT
06	OR-02 O-RING	27	SP-02 SPRING	48	HR-03 HANGER
07	SP-01 SPRING	28	OR-11 O-RING	49	FD-10 FEEDER
08	OR-03 POPPET O-RING	29	SP-07 SPRING RETAINER	50	G-03 CONTACT ARM GUIDE
09	PV-01 POPPET VALVE	30	E-2.5 E. WASHER	51	M4x16 HD. SCREW
10	OR-04 PISTON STOP O-RING	31	TG-01 TRIGGER	52	M4 NUT
11	OR-05 CYLINDER SEAL O-RING	32	SM-04 TRIGGER PIN	53	SM-03 SPRING PIN
12	OR-06 CYLINDER O-RING	33	TG-02 SECONDARY TRIGGER	54	WS-03 SPACER
13	CY-03 CYLINDER	34	SM-05 CONTACT PIN	55	BH5x20 BH. SCREW
14	OR-07 PISTON O-RING	35	ST-04 CONTACT ARM	56	M5 NUT
15	PS-02 PISTON	36	E-2.5 E. WASHER	57	SM-10 SPRING PIN
16	SM-01 SPRING PIN	37	M5x16 HD. SCREW	58	M5x20 HD. SCREW
17	SM-02 STEM	38	M5x12 HD. SCREW	59	WS-01 WASHER
18	DB-04 DRIVE BLADE	39	P-02 DRIVER GUIDE	60	WS-01 WASHER
19	BP-01 BUMPER	40	M4x6 HD. SCREW	61	PS-29 PISTON & DRIVER ASSEMBLY
20	SW-02 SEAL WASHER	41	SP-06 PLATE SPRING		
21	OR-08 PIPE O-RING	42	MZ-06 MAGAZINE		