


SUPCO S-M25

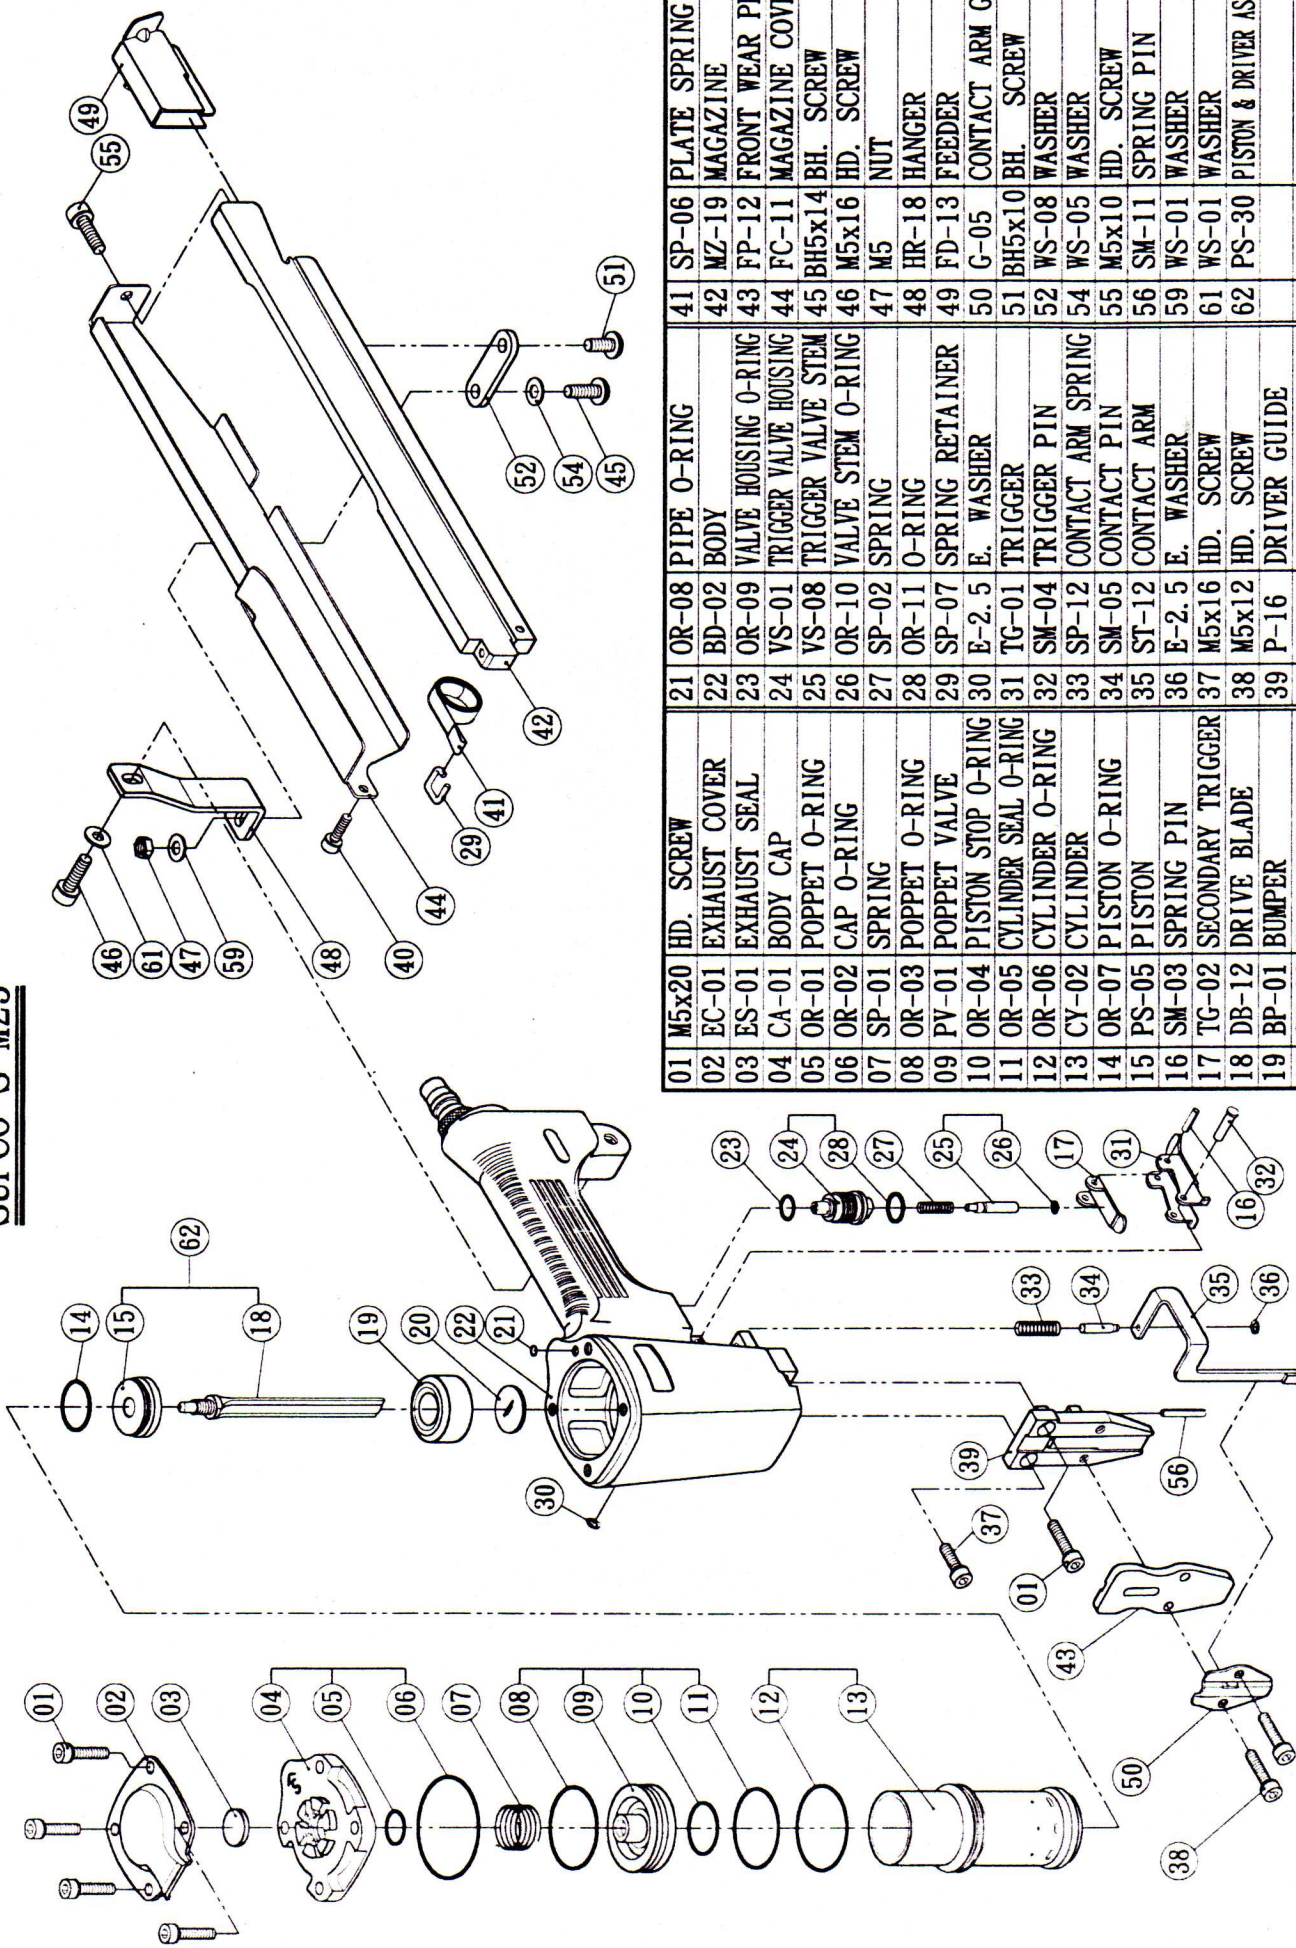

01	M5x20	HD. SCREW	21	OR-08	PIPE O-RING	41	SP-06	PLATE SPRING
02	EC-01	EXHAUST COVER	22	BD-02	BODY	42	MZ-19	MAGAZINE
03	ES-01	EXHAUST SEAL	23	OR-09	VALVE HOUSING O-RING	43	FP-12	FRONT WEAR PLATE
04	CA-01	BODY CAP	24	VS-01	TRIGGER VALVE HOUSING	44	FC-11	MAGAZINE COVER
05	OR-01	POPPET O-RING	25	VS-08	TRIGGER VALVE STEM	45	BH5x14	BH. SCREW
06	OR-02	CAP O-RING	26	OR-10	VALVE STEM O-RING	46	M5x16	HD. SCREW
07	SP-01	SPRING	27	SP-02	SPRING	47	M5	NUT
08	OR-03	POPPET O-RING	28	OR-11	O-RING	48	HR-18	HANGER
09	PV-01	POPPET VALVE	29	SP-07	SPRING RETAINER	49	FD-13	FEEDER
10	OR-04	PISTON STOP O-RING	30	E-2.5	E. WASHER	50	G-05	CONTACT ARM GUI
11	OR-05	CYLINDER SEAL O-RING	31	TG-01	TRIGGER	51	BH5x10	BH. SCREW
12	OR-06	CYLINDER O-RING	32	SM-04	TRIGGER PIN	52	WS-08	WASHER
13	CY-02	CYLINDER	33	SP-12	CONTACT ARM SPRING	54	WS-05	WASHER
14	OR-07	PISTON O-RING	34	SM-05	CONTACT PIN	55	M5x10	HD. SCREW
15	PS-05	PISTON	35	ST-12	CONTACT ARM	56	SM-11	SPRING PIN
16	SM-03	SPRING PIN	36	E-2.5	E. WASHER	59	WS-01	WASHER
17	TG-02	SECONDARY TRIGGER	37	M5x16	HD. SCREW	61	WS-01	WASHER
18	DB-12	DRIVE BLADE	38	M5x12	HD. SCREW	62	PS-30	PISTON & DRIVER ASSEM
19	BP-01	BUMPER	39	P-16	DRIVER GUIDE			
20	SW-06	SEAL WASHER	40	M4x6	HD. SCREW			